



CRAFTSMANSHIP ISN'T DEAD.
IT'S HIDING IN MIDDLE TENNESSEE.



MID TENN
LUMBER


EST. CO 1967

MID  TN
LUMBER
EST. CO 1967

TABLE OF CONTENTS

<i>CROWNS</i>	4
<i>BEDS</i>	5
<i>COVES</i>	5
<i>QUARTER ROUNDS</i>	6
<i>HALF ROUNDS</i>	6
<i>BASE SHOES</i>	6
<i>FLAT ASTRAGALS</i>	7
<i>SHELF EDGE/SCREEN MOULD</i>	7
<i>GLASS BEADS</i>	7
<i>BASE CAPS</i>	8
<i>BRICK MOULD</i>	8
<i>PANEL MOULDINGS</i>	8
<i>DRIP CAPS</i>	9
<i>CORNER GUARDS</i>	9
<i>SHINGLE/ PANEL MOULDINGS</i>	10
<i>BATTENS</i>	10
<i>HAND RAIL</i>	11
<i>ROUNDS</i>	12
<i>SQUARES</i>	12
<i>SCREEN/ S4S STOCK</i>	12
<i>LATTICE</i>	13
<i>PICTURE MOULDING</i>	13
<i>BACK BANDS</i>	13
<i>WAINSCOT/ PLY CAT</i>	14
<i>CHAIR RAILS</i>	15
<i>CASING</i>	16
<i>BASE MOULDINGS</i>	20
<i>STOPS</i>	22

CRAFTSMANSHIP ISN'T DEAD.
IT'S HIDING IN MIDDLE TENNESSEE.

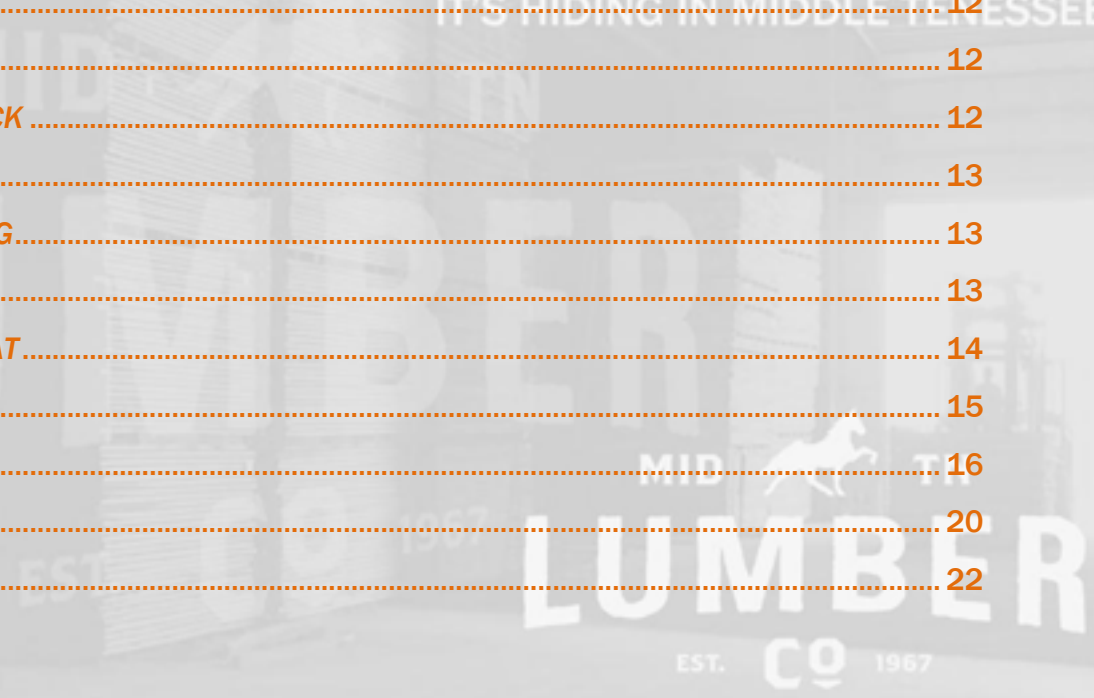

PANEL STRIPS/ MULLION CASINGS..... 23

SHELF CLEAT..... 23

CHAMFER STRIP 23

INSIDE CORNER 23

FLAT STOOLS..... 24

NOSING 24

HEARTH STRIP..... 25

RABBETED STOOLS..... 25

T-ASTRAGALS..... 26

DOOR SILLS..... 26

JAMBS 27

THRESHOLD 28

PANELING..... 29

INDEX 30


CRAFTSMANSHIP ISN'T DEAD.
IT'S HIDING IN MIDDLE TENNESSEE.

MID TN
LUMBER

EST. CO 1967

MID  TN
LUMBER
EST. CO 1967

CROWNS

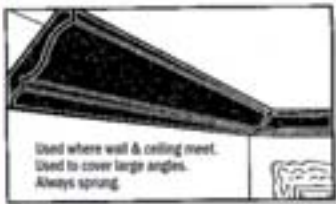

WM 45
11/16 x 5-1/4


WM 47
11/16 x 4-5/8
(3/4)*

WM 48
11/16 x 4-1/4
(3/4)*

WM 49
11/16 x 3-5/8
(3/4)*

WM 51
11/16 x 3-1/4
(3/4)*

WM 60
9/16 x 1-3/4

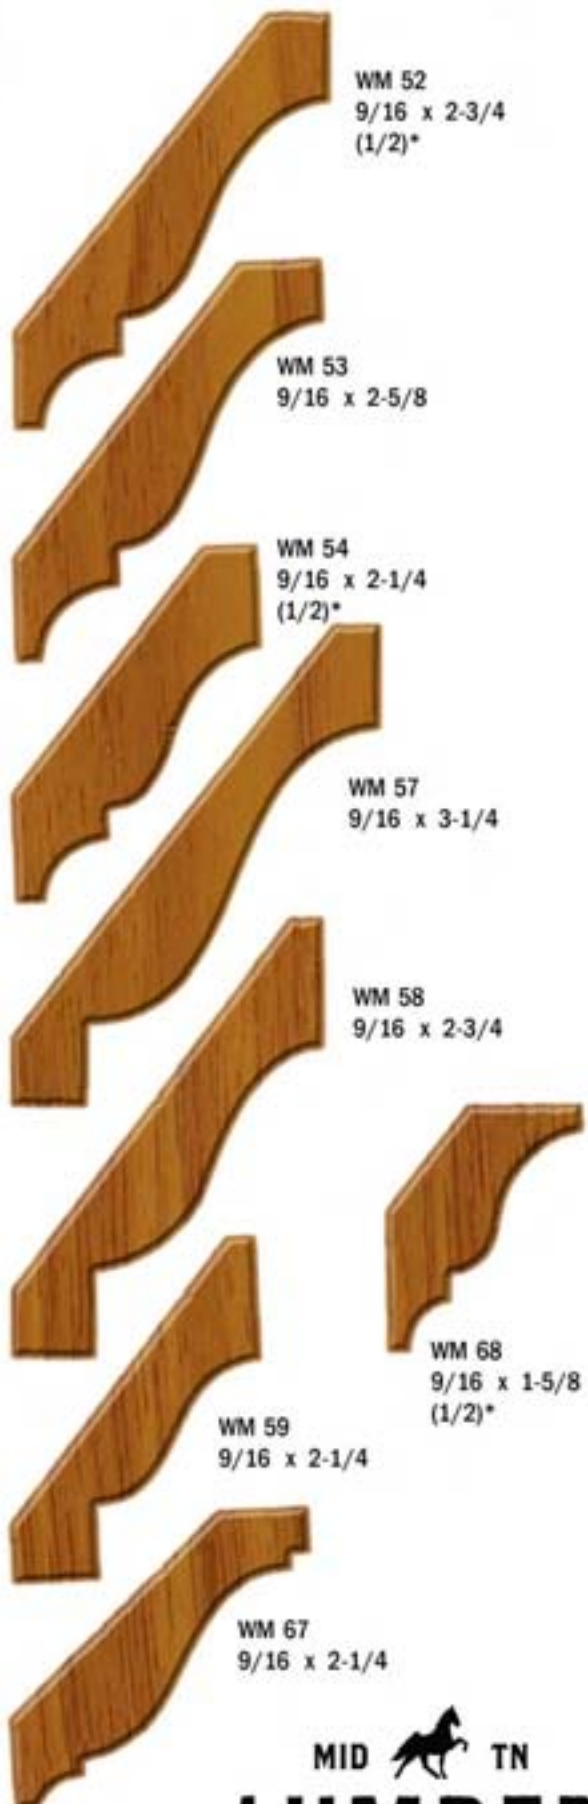

WM 52
9/16 x 2-3/4
(1/2)*

WM 53
9/16 x 2-5/8

WM 54
9/16 x 2-1/4
(1/2)*

WM 57
9/16 x 3-1/4

WM 58
9/16 x 2-3/4

WM 68
9/16 x 1-5/8
(1/2)*

WM 59
9/16 x 2-1/4

WM 67
9/16 x 2-1/4

COVES BEDS



WM 70
9/16 x 2-3/4



WM 72
9/16 x 2-1/4



WM 74
9/16 x 1-3/4
(1/2)*



WM 75
9/16 x 1-5/8
(1/2)*



WM 76
9/16 x 1-1/2



WM 81
9/16 x 3-1/4



WM 82
9/16 x 2-3/4



WM 84
9/16 x 2-1/4



WM 85
9/16 x 1-3/4
(1/2)*



WM 86
9/16 x 1-5/8
(1/2)*



WM 89
9/16 x 2
(1/2, 7/16)*



WM 90
3/4 x 1-1/8




WM 92
3/4 x 7/8



WM 93
3/4 x 3/4



WM 94 1
1/16 x 1-1/8

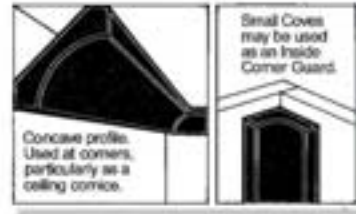

WM 95
11/16 x 7/8



WM 96
5/8 x 3/4



WM 100
11/16 x 11/16




WM 101
1/2 x 1/2

QUARTER ROUNDS

HALF ROUNDS

BASE SHOES

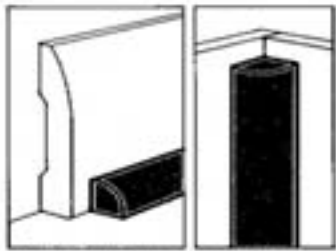

May be used as a Base Shoe, Inside Corner Moulding, or to cover any 90° recessed juncture.



WM 103
1-1/16 x 1-1/16



WM 107
5/8 x 5/8



WM 104
11/16 x 1-3/8



WM 108
1/2 x 1/2



WM 105
3/4 x 3/4




WM 109
3/8 x 3/8



WM 106
11/16 x 11/16



WM 110
1/4 x 1/4

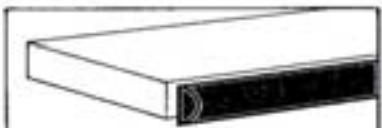

May be used as a Screen Moulding or Bead Shell Edge or Panel Moulding.



WM 120
1/2 x 1




WM 122
3/8 x 11/16



WM 123
5/16 x 5/8



WM 124
1/4 x 1/2

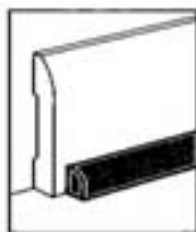

Applied where Base Moulding meets floor. Protects Base from damage. Conceals uneven lines or cracks where Base meets floor.



WM 126
1/2 x 3/4



WM 127
7/16 x 3/4



WM 129
7/16 x 11/16
(3/8)*



WM 130
3/8 x 11/16



WM 131
1/2 x 3/4





WM 133
11/16x 1-3/4



WM 134
11/16x 1-3/4



WM 135
7/16 x 3/4

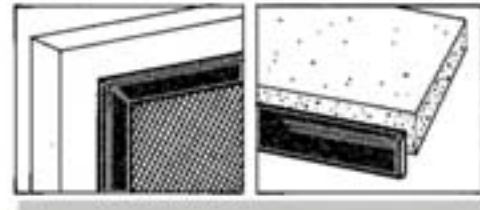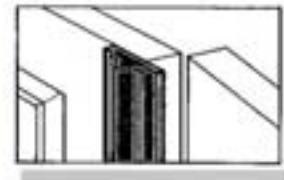

WM 137
3/8 x 3/4



WM 141
1/4 x 5/8



WM 138
5/16 x 5/8



WM 142
1/4 x 3/4



WM 140
1/4 x 3/4



WM 144
1/4 x 3/4



WM 147
1/2 x 9/16



WM 148
3/8 x 3/8

BASE CAPS
BRICK MOULD
PANEL MOULDINGS



A decorative member installed flush against wall and the top of an S4S Baseboard. Also a versatile Panel Moulding.



WM 162
11/16x 1-1/4



WM 163
11/16x 1-3/8



WM 164
11/16x 1-1/8



WM 166
11/16x 1-1/4



WM 167
11/16x 1-1/8



WM 172
5/8 x 3/4



Originally used to trim out raised panel wall construction. Now, often used to frame attractive wall coverings for a paneled effect.



WM 175
1-1/16 x 2

WM 176
1-1/16 x 1-3/4



WM 180
1-1/4 x 2
(1-1/16)*



Used as an exterior door & window Casing. A thick Moulding providing a surface for brick or other siding to butt against.



WM 182
11/16x 1-5/8



WM 184
5/16 x 15/16



WM 185
9/32 x 1-3/8



WM 183
9/16 x 1-1/8



WM 186
3/8 x 1




WM 1867
9/16x 1-3/16



WM 187
1-1/16 x 2



WM 196
11/16x 1-3/4

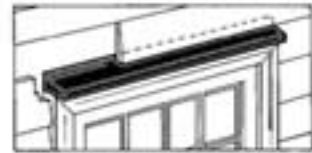

Applied over exterior window & door frames.
Keeps water from seeping under the siding.
Also directs water away from window glass.



WM 188
1-1/16 x 1-5/8



WM 197 1
1/16 x 1-5/8



Outside (OS) Corner Guard is used to protect corners or to cover ragged edge where wall covering and painted surfaces meet at outside corner. (See page 12 for Inside Corner Guard.)



WM 199
1 x 1



WM 200
3/4 x 3/4



WM 204
1-5/16 x 1-5/16



WM 201
1-5/16 x 1-5/16



WM 205 *
1-1/8 x 1-1/8
(1-1/16)*



WM 202
1-1/8 x 1-1/8
(1-1/16)*



WM 203
3/4 x 3/4




WM 206
3/4 x 3/4

DRIPT CAPS

CORNER GUARDS

SHINGLE/PANEL MOULDINGS

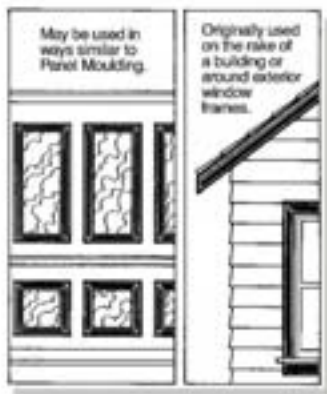

WM 207
11/16x 2-1/2



WM 209
11/16x 2



WM 210
11/16x 1-5/8



WM 212
11/16x 2-1/2




WM 217
11/16x 1-3/4



WM 213
9/16 x 2



WM 218
11/16x 1-1/2

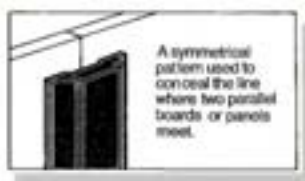

WM 224
9/16 x 2-1/4



WM 229
11/16x 1-5/8

BATTENS

HAND RAIL



WM 230
1-1/2 x 1-11/16



Used as a hand support in a stairwell.



WM 231
1-1/2 x 1-11/16
(1-5/8)*



WM 240
1-1/4 x 2-1/4
(1-3/16)*



WM 6010
2-1/4 x 2-3/8



WM 6210
2-3/8 x 2-3/4



WM 6310
2-7/16 x 3-9/16

SCREEN
S4S STOCK
SQUARES
ROUNDS

Most often used as a closet pole or room divider.



WM 232
1-5/8

WM 233
1-5/16
(1-1/4)*

WM 234
1-1/16



Used in cabinets, framing for shelving or other utilitarian uses. Also used as baluster for supporting stair handrails.



WM 235
1-3/4 x 1-3/4

WM 236
1-5/8 x 1-5/8
(1-1/2)*

WM 237
1-5/16 x 1-5/16
(1-1/4)*

WM 238
1-1/16 x 1-1/16

WM 239
3/4 x 3/4



Same basic uses as Squares.



WM 241
1-1/16 x 2-3/4

WM 243
1-1/16 x 1-3/4

WM 246
3/4 x 2-3/4

WM 247
3/4 x 2

WM 248
3/4 x 1-3/4

WM 249
3/4 x 1-5/8


WM 250
3/4 x 1-1/2

WM 251
3/4 x 1-3/8

WM 252
3/4 x 1-1/4

WM 254
1/2 x 3/4

LATICE

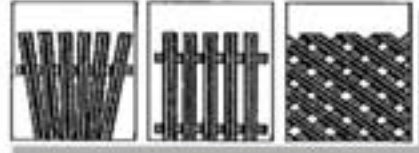

Originally used in trills work, This small, plain S4S Moulding is among the most versatile of profiles.

WM265
9/32 x 1-3/4

WM266
9/32 x 1-5/8

WM267
9/32 x 1-3/8

WM268
9/32 x 1-1/8

WM269
9/32 x 1-1/2



PICTURE MOULDING

Used to support hooks for picture hanging. Applied around a room's circumference near the ceiling line.



WM273
11/16 x 1-3/4



WM276
11/16 x 1-3/4



WM280
11/16 x 1-1/16



WM281
11/16 x 1-1/8

A rabbeted Moulding used to surround the outside edge of Casing.



BLACK BANDS

WAINSCOT/ PLY CAP



WM290
11/16 x 1-3/8



WM291
11/16 x 1-1/8



WM292
9/16 x 1-1/8
(11/16)*



WM294
11/16 x 1-1/8



WM295
1/2 x 1-1/4



WM296
3/4 x 3/4

CHAIR RAILS



WM297
11/16 x 3



WM298
11/16 x 2-1/2

Interior Moulding applied about one third up from the floor, paralleling Base Moulding and enclosing the room. Originally used to prevent chairs from marking walls. Used today as a key decorative detail in traditional & colonial design.



WM299
9/16 x 2-1/2



WM300
1-1/16 x 3



WM303
9/16 x 2-1/2



WM304
1/2 x 2-1/4



WM305
1-1/8 x 2-3/4



WM390
11/16 x 2-5/8

CASING



WM307
1/2 x 2-1/4



WM315
11/16 x 2-1/2



WM316
11/16 x 2-1/4
(1/2)*



WM321
11/16 x 2-1/4



WM324
11/16 x 2-1/4
(1/2)*



WM327
11/16 x 2-1/4



WM328
11/16 x 2-1/4
(1/2)*



WM329
11/16 x 2-1/4



WM357
1/2 x 2-1/8



WM358
1/2 x 2



WM332
11/16 x 2-1/4





WM346
5/8x 2-1/4
(1/2)*



WM371
11/16 x 2-1/2



WM351
11/16 x 2-1/2



WM376
11/16 x 2-1/4
(1/2)*



WM356
11/16 x 2-1/4
(1/2)*



WM387
5/8x 2-1/4



WM361
11/16 x 2-1/2
(1/2)*



WM390
11/16 x 2-5/8



WM366
11/16 x 2-1/4
(1/2)*



WM440
11/16 x 2-1/2



WM367
1/2 x 2-1/2)*



WM442
11/16 x 2-1/4
(1/2)*



WM443
11/16 x 3-1/4



WM444
11/16 x 3-1/2



WM445
11/16 x 3-1/4



WM446
5/8 x 3-1/2



WM448
11/16 x 3-1/2



WM683
5/8 x 3-1/4

- WM410 11/16x 4-1/4
- WM412 11/16x 3-1/2
- WM413 11/16x 3-1/4



WM430 9/16 x 4-1/4
WM432 9/16 x 3-1/2
WM433 9/16 x 3-1/4



WM452 11/16 x 2-1/2
WM453 11/16 x 2-1/4



WM472 9/16 x 2-1/2
WM473 9/16 x 2-1/4



WM492 7/16 x 2-1/2
WM493 7/16 x 2-1/4



WM503
1 x 3-1/2



WM520
1-1/16 x 3-1/2



WM523
1-1/16 x 3-1/2



BASE MOULDING



WM632 1/2 x 3-1/2
 WM633 1/2 x 3-1/4 (7/16)*
 WM634 1/2 x 3 (7/16)*



WM635 3/8 x 3


WM636 3/8 x 2-3/4

WM618 9/16 x 5-1/4
 WM620 9/16 x 4-1/4 (7/16)*
 WM622 9/16 x 3-1/2
 WM623 9/16 x 3-1/4
 WM624 9/16 x 3



WM658 9/16 x 5-1/4
 WM660 9/16 x 4-1/4
 WM662 9/16 x 3-1/2
 WM663 9/16 x 3-1/4
 WM664 9/16 x 3

WM709 9/16 x 4-1/2
 WM710 9/16 x 4-1/4
 WM712 9/16 x 3-1/2
 WM713 9/16 x 3-1/4 (7/16)*
 WM714 9/16 x 3 (7/16)*

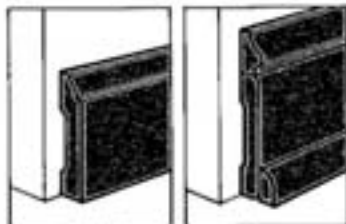

Applied where floor & walls meet, forming a visual foundation. Protects walls from kicks, bumps, furniture, etc. Base may be referred to as One, Two or Three-Member. Base Shoe & Base Cap are used to conceal uneven floor & wall junctions.



WM722 1/2 x 3-1/2
 WM723 1/2 x 3-1/4 (3/8)*
 WM724 1/2 x 3 (3/8)*
 WM725 1/2 x 2-1/2 (3/8)*
 WM726 1/2 x 2-1/4

WM715 7/16 x 2-3/4

MID  TN
LUMBER
 EST. CO 1967



WM727 3/8 x 2-3/4

- WM750 9/16 x 4-1/4
- WM752 9/16 x 3-1/2
- WM753 9/16 x 3-1/4 (7/16)*



WM761 7/16 x 2-1/2

WM760 7/16 x 3-1/2



WM738
9/16 x 5-1/4

STOPS



In door trim, Stop is nailed to the faces of the door frame to prevent the door from swinging through. As window trim, Stop holds the bottom sash of a double-hung window in place. Also used as an apron under window stools.



- WM 813 7/16 x 2-1/4
- WM 814 7/16 x 1-3/4
- WM 815 7/16 x 1-5/8
- WM 816 7/16 x 1-3/8
- WM 817 7/16 x 1-1/4
- WM 818 7/16 x 1-1/8
- WM 820 7/16 x 7/8



- WM 823 3/8x 2-1/4
- WM 824 3/8x 1-3/4
- WM 825 3/8x 1-5/8
- WM 826 3/8x 1-3/8
- WM 827 3/8x 1-1/4
- WM 828 3/8x 1-1/8
- WM 830 3/8x 7/8
- WM 831 3/8x 3/4



- WM 843 7/16 x 2-1/4
- WM 844 7/16 x 1-3/4
- WM 845 7/16 x 1-5/8
- WM 846 7/16 x 1-3/8
- WM 847 7/16 x 1-1/4
- WM 848 7/16 x 1-1/8
- WM 850 7/16 x 7/8
- WM 851 7/16 x 3/4



- WM 853 3/8x 2-1/4
- WM 854 3/8x 1-3/4
- WM 855 3/8x 1-5/8
- WM 856 3/8x 1-3/8
- WM 857 3/8x 1-1/4
- WM 858 3/8x 1-1/8
- WM 860 3/8x 7/8
- WM 861 3/8x 3/4



- WM 873 7/16 x 2-1/4
- WM 874 7/16 x 1-3/4
- WM 875 7/16 x 1-5/8
- WM 876 7/16 x 1-3/8
- WM 877 7/16 x 1-1/4
- WM 878 7/16 x 1-1/8
- WM 880 7/16 x 7/8
- WM 881 7/16 x 3/4



- WM 883 3/8x 2-1/4
- WM 884 3/8x 1-3/4
- WM 885 3/8x 1-5/8
- WM 886 3/8x 1-3/8
- WM 887 3/8x 1-1/4
- WM 888 3/8x 1-1/8
- WM 890 3/8x 7/8
- WM 891 3/8x 3/4



- WM 903 7/16 x 2-1/4
- WM 904 7/16 x 1-3/4
- WM 905 7/16 x 1-5/8
- WM 906 7/16 x 1-3/8
- WM 907 7/16 x 1-1/4
- WM 908 7/16 x 1-1/8
- WM 910 7/16 x 7/8
- WM 911 7/16 x 3/4



- WM 913 3/8x 2-1/4
- WM 914 3/8x 1-3/4
- WM 915 3/8x 1-5/8
- WM 916 3/8x 1-3/8
- WM 917 3/8 x 1-1/4
- WM 918 3/8x 1-1/8
- WM 920 3/8x 7/8
- WM 921 3/8x 3/4



- WM 933 7/16 x 2-1/4
- WM 934 7/16 x 1-3/4
- WM 935 7/16 x 1-5/8
- WM 936 7/16 x 1-3/8
- WM 937 7/16 x 1-1/4
- WM 938 7/16 x 1-1/8
- WM 940 7/16 x 7/8
- WM 941 7/16 x 3/4



- WM 943 3/8x 2-1/4
- WM 944 3/8x 1-3/4
- WM 945 3/8x 1-5/8
- WM 946 3/8x 1-3/8
- WM 947 3/8 x 1-1/4
- WM 948 3/8x 1-1/8
- WM 950 3/8x 7/8
- WM 951 3/8x 3/4




WM953 7/16 x Width Specified



WM954 3/8 x Width Specified



WM955 3/8x 2-1/4
 WM956 3/8x 2
 WM957 3/8x 1-3/4

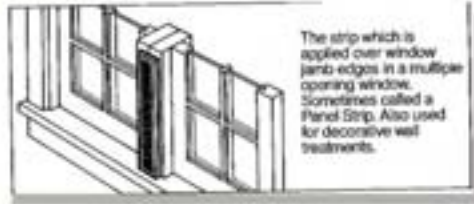

WM960 3/8x 2-1/4
 WM962 3/8x 2
 WM963 3/8x 1-3/4



WM980 3/8x 2-1/4
 WM982 3/8x 2
 WM983 3/8x 1-3/4



WM965 3/8x 2-1/4
 WM967 3/8x 2
 WM968 3/8x 1-3/4



WM985 3/8x 2-1/4
 WM987 3/8x 2
 WM988 3/8x 1-3/4



WM970 3/8x 2-1/4
 WM972 3/8x 2
 WM973 3/8x 1-3/4



WM989 3/6 x 2



WM975 3/8x 2-1/4
 WM977 3/8x 2
 WM978 3/8x 1-3/4

Commonly used in closets, cabinets & bookcases to support the shelves. Also called Shelf Strip.



WM 990
 11/16 x 1-1/2



WM 995
 3/4x 3/4



Used in highway & dam construction forms, making a chamfered edge at concrete corners. Also used where kitchen cabinet tops meet the wall. Also used as a Finestum Cove, (under linoleum where it extends up the wall).


Joins two walls at inside corner. Solves problems of uneven joints where butted panels, wallpaper, painted or contrasting surfaces meet. Gives corners a decorative finished look.

MID  TN
LUMBER

EST. **CO** 1967




WM 999
 5/16 x 1

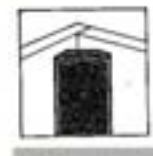

PANEL STRIPS/
 MULLION CASING

SHELF
 CHISMER
 STRIP
 INSIDE
 CORNER
 CLEAT

FLAT STOOLS NOSING

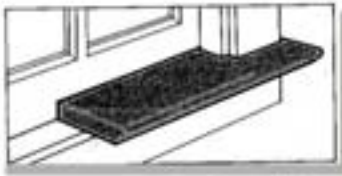

A milled interior trim member serving as a sash or window-frame sill cap. Stools may be "beveled-rabbeted" or "rabbeted" to receive the window-frame sill or "non-rabbeted." Some "non-beveled" or "non-rabbeted" stools include a tongue to fit in the groove of the window-frame sill.



WM1021
11/16 x Width Specified



WM1022
11/16 x Width Specified



In stairwork, the rounded edge member which projects beyond the face of the riser. Used at upper floor levels of stairways, stair landings and around open stair wells. Sometimes rabbeted to accept subflooring. Also called "tread nosing."



WM1030
1-1/16 X 1-1/4



WM1033
3/4 X 3-1/2



WM1031
1-1/16 X 1-1/2



WM1060
1-1/16 X 3-1/2



WM1032
3/4 X 1-1/8



WM1061
1-1/16 X 3-1/2


HEARTH STRIP

RABBETED STOOLS



WM1045
5/8 X 1-1/2

Used at the juncture of two different floor levels—as in a doorway where a higher floor meets a lower floor, or where a floor butts against a hearth.

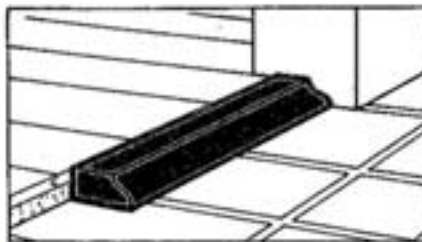

SPECIFY WIDTH OF RABBET (W), DEGREE FOR BEVEL (B),
RABBET FRONT DEPTH (FD), AND RABBET BACK DEPTH (BD).



- WM1131 1-1/16 x 3-5/8
- WM1133 1-1/16 x 3-1/4
- WM1134 1-1/16 x 2-3/4




- WM1153 11/16 x 3-1/4
- WM1154 11/16 x 2-3/4
- WM1155 11/16 x 2-1/2
- WM1156 11/16 x 2-1/4



- WM1161 1-1/16 x 3-5/8
- WM1163 1-1/16 x 3-1/4
- WM1164 1-1/16 x 2-3/4




- WM1193 11/16 x 3-1/4
- WM1194 11/16 x 2-3/4
- WM1195 11/16 x 2-1/2
- WM1196 11/16 x 2-1/4

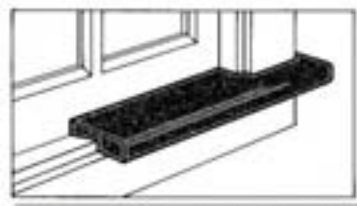

A moulded interior trim member serving as a sash or window-frame sill cap.

DOOR SILLS T-ASTRAGALS

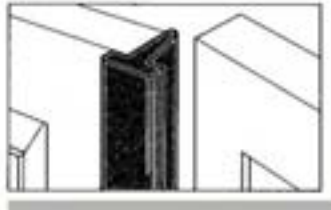

An Astragal, Tlike in shape, which is rabbeted to the approximate thickness of the swinging door.



WM1300
1-1/4 x 2-1/4
(1-3/16)*




WM1305
1-1/4 x 2
(1-3/16)*



WM1310
1-1/4 x 2-1/4
(1-3/16)*



WM1315
1-1/4 x 2
(1-3/16)*

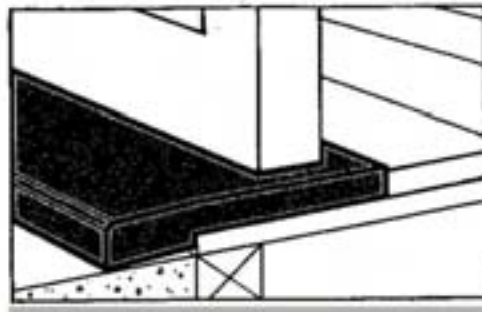


The horizontal member that forms the bottom of an exterior door frame. Sometimes rabbeted to receive subflooring.



WM3000 1-3/8 x 5-1/4
WM3001 1-3/8 x 7-1/4
WM3002 1-1/16 x 5-1/4

Top and side members of a door or window frame. Can be a one-piece flat jamb, or rabbeted with a stop, or a two-piece adjustable split jamb.

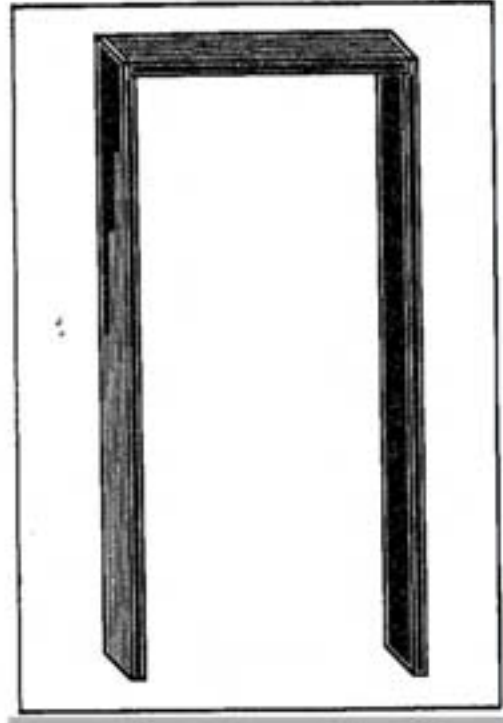

SPECIFY END WORK & LENGTH BELOW DADO



WM3020 11/16 x 4-9/16
WM3020 11/16 x 5-1/4



WM3030 1-1/4 x 4-9/16
1-7/16 or 1-13/16


WM3040 1 x 2-3/4



11/16 x 2-7/8



THRESHHOLD

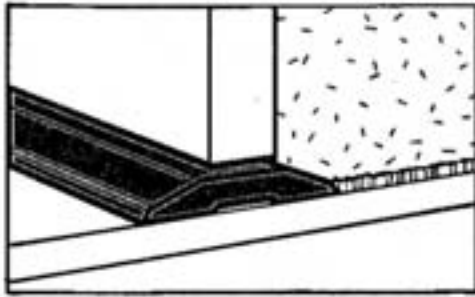

A beveled or tapered wood member used at the bottom of a doorway entrance.



WM4001 5/8 x 3-1/2
WM4002 3/4 x 3-1/2
WM4003 3/4 x 5-1/2



WM4010
3/4 x 3-1/2




WM4020
3/4 x 4-1/2



WM4030
1-1/16 x 5-1/2

Individual solid wood tongue & groove planks designed to cover interior walls or ceilings. Beveled edges or grooves add to panel's dimensional appearance.

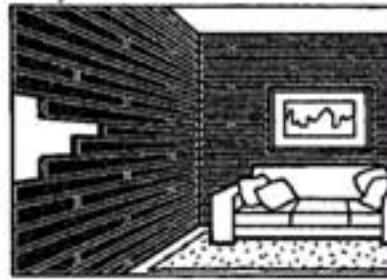

HPT 46
3/4 x specified width



HPT 17
7/16 x specified width



HPT 15
7/16 x specified width



HPT 37
3/8 x specified width



HPT 313
3/8 x specified width

PANELING

INDEX

WM	45	CROWNS	11/16		5-1/4	4
WM	47	CROWNS	11/16	3/4	4-5/8	4
WM	48	CROWNS	11/16	3/4	4-1/4	4
WM	49	CROWNS	11/16	3/4	3-5/8	4
WM	51	CROWNS	11/16	3/4	38047	4
WM	52	CROWNS	9/16	1/2	2-3/4	4
WM	53	CROWNS	9/16		2-5/8	4
WM	54	CROWNS	9/16	1/2	2-1/4	4
WM	57	CROWNS	9/16		3-1/4	4
WM	58	CROWNS	9/16		2-3/4	4
WM	59	CROWNS	9/16		2-1/4	4
WM	60	CROWNS	9/16		1-3/4	4
WM	67	CROWNS	9/16		2-1/4	4
WM	68	CROWNS	9/16	1/2	1-5/8	4
WM	70	BEDS	9/16		2-3/4	5
WM	72	BEDS	9/16		2-1/4	5
WM	74	BEDS	9/16	1/2	1-3/4	5
WM	75	BEDS	9/16	1/2	1-5/8	5
WM	76	BEDS	9/16		1-1/2	5
WM	81	COVES	9/16		3-1/4	5
WM	82	COVES	9/16		2-3/4	5
WM	84	COVES	9/16		2-1/4	5
WM	85	COVES	9/16	1/2	1-3/4	5
WM	86	COVES	9/16	1/2	1-5/8	5
WM	89	COVES	9/16	1/2	2	5
WM	90	COVES	3/4		1-1/8	5
WM	92	COVES	3/4		7/8	5
WM	93	COVES	3/4	3/4	3/4	5
WM	94	COVES	11/16		1-1/8	5
WM	95	COVES	11/16		7/8	5
WM	96	COVES	5/8	5/8	3/4	5
WM	100	COVES	11/16	11/16	11/16	5
WM	101	COVES	1/2	1/2	1/2	5
WM	103	QUARTER ROUNDS	1-1/16		1-1/16	6
WM	104	QUARTER ROUNDS	11/16		1-3/8	6
WM	105	QUARTER ROUNDS	3/4	3/4	3/4	6
WM	106	QUARTER ROUNDS	11/16	11/16	11/16	6
WM	107	QUARTER ROUNDS	5/8		5/8	6
WM	108	QUARTER ROUNDS	1/2	1/2	1/2	6
WM	109	QUARTER ROUNDS	3/8		3/8	6
WM	110	QUARTER ROUNDS	1/4		1/4	6

WM 120	HALF ROUNDS	1/2		1	6
WM 122	HALF ROUNDS	3/8		11/16	6
WM 123	HALF ROUNDS	5/16		5/8	6
WM 124	HALF ROUNDS	1/4		1/2	6
WM 126	BASE SHOES	1/2	1/2	3/4	6
WM 127	BASE SHOES	7/16	7/16	3/4	6
WM 129	BASE SHOES	7/16	7/16	11/16	6
WM 130	BASE SHOES	3/8		11/16	6
WM 131	BASE SHOES	1/2	1/2	3/4	6
WM 133	FLAT ASTRAGALS	11/16	11/16	1-3/4	7
WM 134	FLAT ASTRAGALS	11/16		1-3/4	7
WM 135	FLAT ASTRAGALS	7/16		3/4	7
WM 137	SHELF EDGE/SCREEN MOULD	3/8		3/4	7
WM 138	SHELF EDGE/SCREEN MOULD	5/16		5/8	7
WM 140	SHELF EDGE/SCREEN MOULD	1/4		3/4	7
WM 141	SHELF EDGE/SCREEN MOULD	1/4		5/8	7
WM 142	SHELF EDGE/SCREEN MOULD	1/4	1/4	3/4	7
WM 144	SHELF EDGE/SCREEN MOULD	1/4	1/4	3/4	7
WM 147	GLASS BEADS	1/2		9/16	7
WM 148	GLASS BEADS	3/8		3/8	7
WM 162	BASE CAPS	11/16		1-1/4	8
WM 163	BASE CAPS	11/16		1-3/8	8
WM 164	BASE CAPS	11/16	11/16	1-1/8	8
WM 166	BASE CAPS	11/16	11/16	1-1/4	8
WM 167	BASE CAPS	11/16	11/16	1-1/8	8
WM 172	BASE CAPS	5/8	5/8	3/4	8
WM 175	BRICK MOULD	1-1/16		2	8
WM 176	BRICK MOULD	1-1/16		1-3/4	8
WM 180	BRICK MOULD	1-1/4	1-1/16	2	8
WM 182	PANEL MOULDINGS	11/16		1-5/8	8
WM 183	PANEL MOULDINGS	9/16		1-1/8	8
WM 184	PANEL MOULDINGS	5/16		15/16	8
WM 185	PANEL MOULDINGS	9/32		1-3/8	8
WM 186	PANEL MOULDINGS	3/8		1	8
WM 187	DRIP CAPS	1-1/16	9/16	2	9
WM 188	DRIP CAPS	1-1/16		1-5/8	9
WM 196	DRIP CAPS	11/16		1-3/4	9
WM 197	DRIP CAPS	11/16		1-5/8	9
WM 199	CORNER GUARDS	1		1	9
WM 200	CORNER GUARDS	3/4		3/4	9
WM 201	CORNER GUARDS	1-5/16		1-5/16	9
WM 202	CORNER GUARDS	1-1/8	1-1/16	1-1/8	9
WM 203	CORNER GUARDS	3/4		3/4	9
WM 204	CORNER GUARDS	1-5/16		1-5/16	9

WM	205	CORNER GUARDS	1-1/8	1-1/16	1-1/8	9
WM	206	CORNER GUARDS	3/4	3/4	3/4	9
WM	207	SHINGLE / PANEL MOULDINGS	11/16		2-1/2	10
WM	209	SHINGLE / PANEL MOULDINGS	11/16		2	10
WM	210	SHINGLE / PANEL MOULDINGS	11/16		1-5/8	10
WM	212	SHINGLE / PANEL MOULDINGS	11/16		2-1/2	10
WM	213	SHINGLE / PANEL MOULDINGS	9/16		2	10
WM	217	SHINGLE / PANEL MOULDINGS	11/16		1-3/4	10
WM	218	SHINGLE / PANEL MOULDINGS	11/16		1-1/2	10
WM	224	BATTENS	9/16		2-1/4	10
WM	229	BATTENS	11/16		1-5/8	10
WM	230	HAND RAIL	1-1/2	1-1/2	1-11/16	11
WM	231	HAND RAIL	1-1/2	1-5/8	1-11/16	11
WM	240	HAND RAIL	1-1/4	1-3/16	2-1/4	11
WM	6010	HAND RAIL	2-1/4		2-3/8	11
WM	6210	HAND RAIL	2-3/8		2-3/4	11
WM	6310	HAND RAIL	2-7/16		3-9/16	11
WM	232	ROUNDS			1-5/8	12
WM	233	ROUNDS		1-1/4	1-5/16	12
WM	234	ROUNDS		1-1/16	1-1/16	12
WM	235	SQUARES	1-3/4		1-3/4	12
WM	236	SQUARES	1-5/8	1-1/2	1-5/8	12
WM	237	SQUARES	1-5/16	1-1/4	1-5/16	12
WM	238	SQUARES	1-1/16	1-1/16	1-1/16	12
WM	239	SQUARES	3/4	3/4	3/4	12
WM	241	SCREEN / S4S STOCK	1-1/16		2-3/4	12
WM	243	SCREEN / S4S STOCK	1-1/16		1-3/4	12
WM	246	SCREEN / S4S STOCK	3/4	3/4	2-3/4	12
WM	247	SCREEN / S4S STOCK	3/4		2	12
WM	248	SCREEN / S4S STOCK	3/4	3/4	1-3/4	12
WM	249	SCREEN / S4S STOCK	3/4		1-5/8	12
WM	250	SCREEN / S4S STOCK	3/4		1-1/2	12
WM	251	SCREEN / S4S STOCK	3/4		1-3/8	12
WM	252	SCREEN / S4S STOCK	3/4		1-1/4	12
WM	254	SCREEN / S4S STOCK	1/2	1/2	3/4	12
WM	265	LATTICE	9/32		1-3/4	13
WM	266	LATTICE	9/32		1-5/8	13
WM	267	LATTICE	9/32		1-3/8	13
WM	268	LATTICE	9/32		1-1/8	13
WM	269	LATTICE	9/32		1-1/2	13
WM	273	PICTURE MOULDING	11/16		1-3/4	13
WM	276	PICTURE MOULDING	11/16		1-3/4	13

WM	280	BACK BANDS	11/16		1-1/16	13
WM	281	BACK BANDS	11/16	11/16	1-1/8	13
WM	290	WAINSCOT/PLY CAT	11/16		1-3/8	14
WM	291	WAINSCOT/PLY CAT	11/16		1-1/8	14
WM	292	WAINSCOT/PLY CAT	9/16		1-1/8	14
WM	294	WAINSCOT/PLY CAT	11/16		1-1/8	14
WM	295	WAINSCOT/PLY CAT	1/2		1-1/4	14
WM	296	WAINSCOT/PLY CAT	3/4		3/4	14
WM	297	CHAIR RAILS	11/16		3	15
WM	298	CHAIR RAILS	11/16		2-1/2	15
WM	299	CHAIR RAILS	9/16		2-1/2	15
WM	300	CHAIR RAILS	1-1/16		3	15
WM	303	CHAIR RAILS	9/16		2-1/2	15
WM	304	CHAIR RAILS	1/2		2-1/4	15
WM	305	CHAIR RAILS	1-1/8		2-3/4	15
WM	390	CHAIR RAILS	11/16		2-5/8	15
WM	307	CASING	1/2		2-1/4	16
WM	315	CASING	11/16		2-1/2	16
WM	316	CASING	11/16	1/2	2-1/4	16
WM	321	CASING	11/16		2-1/4	16
WM	324	CASING	11/16	1/2	2-1/4	16
WM	327	CASING	11/16		2-1/4	16
WM	328	CASING	11/16	1/2	2-1/4	16
WM	329	CASING	11/16		2-1/4	16
WM	332	CASING	11/16		2-1/4	16
WM	346	CASING	5/8	1/2	2-1/4	17
WM	351	CASING	11/16		2-1/2	17
WM	356	CASING	11/16	1/2	2-1/4	17
WM	357	CASING	1/2		2-1/8	17
WM	358	CASING	1/2		2	17
WM	361	CASING	11/16	1/2	2-1/2	17
WM	366	CASING	11/16	1/2	2-1/4	17
WM	367	CASING	1/2		2-1/2	17
WM	371	CASING	11/16		2-1/2	17
WM	376	CASING	11/16	1/2	2-1/4	17
WM	387	CASING	5/8		2-1/4	17
WM	390	CASING	11/16		2-5/8	17
WM	440	CASING	11/16		2-1/2	17
WM	442	CASING	11/16	1/2	2-1/4	17
WM	443	CASING	11/16		3-1/4	18
WM	444	CASING	11/16		3-1/2	18
WM	446	CASING	5/8		3-1/2	18
WM	445	CASING	11/16		3-1/4	18

WM 448	CASING	11/16		3-1/2	18
WM 683	CASING	5/8		3-1/4	18
WM 410	CASING	11/16		4-1/4	18
WM 412	CASING	11/16		3-1/2	18
WM 413	CASING	11/16		3-1/4	18
WM 430	CASING	9/16		4-1/4	19
WM 432	CASING	9/16		3-1/2	19
WM 433	CASING	9/16		3-1/4	19
WM 452	CASING	11/16		2-1/2	19
WM 453	CASING	11/16		2-1/4	19
WM 472	CASING	9/16		2-1/2	19
WM 473	CASING	9/16		2-1/4	19
WM 492	CASING	7/16		2-1/2	19
WM 493	CASING	7/16		2-1/4	19
WM 503	CASING	1		3-1/2	19
WM 520	CASING	1-1/16		3-1/2	19
WM 523	CASING	1-1/16		3-1/2	19
WM 618	CASING	9/16		5-1/4	20
WM 620	CASING	9/16	7/16	4-1/4	20
WM 622	CASING	9/16		3-1/2	20
WM 623	CASING	9/16		3-1/4	20
WM 624	CASING	9/16		3	20
WM 632	CASING	1/2		3-1/2	20
WM 633	CASING	1/2	7/16	3-1/4	20
WM 634	CASING	1/2	7/16	3	20
WM 635	CASING	3/8		3	20
WM 636	CASING	3/8		2-3/4	20
WM 658	CASING	9/16		5-1/4	20
WM 660	CASING	9/16		4-1/4	20
WM 662	CASING	9/16		3-1/2	20
WM 663	CASING	9/16		3-1/4	20
WM 664	CASING	9/16		3	20
WM 709	CASING	9/16		4-1/2	20
WM 710	CASING	9/16		4-1/4	20
WM 712	CASING	9/16		3-1/2	20
WM 713	CASING	9/16	7/16	3-1/4	20
WM 714	CASING	9/16	7/16	3	20
WM 715	CASING	7/16		2-3/4	20
WM 722	CASING	1/2		3-1/2	20
WM 723	CASING	1/2	3/8	3-1/4	20
WM 724	CASING	1/2	3/8	3	20

WM 725	CASING	1/2	3/8	2-1/2	20
WM 727	CASING	1/2	3/8	2-1/4	21
WM 750	CASING	9/16		4-1/4	21
WM 752	CASING	9/16		3-1/2	21
WM 753	CASING	9/16	7/16	3-1/4	21
WM 760	CASING	7/16		3-1/2	21
WM 761	CASING	7/16		2-1/2	21
WM 738	BASE MOULDINGS	9/16		5-1/4	21
WM 813	STOPS	7/16		2-1/4	22
WM 814	STOPS	7/16		1-3/4	22
WM 815	STOPS	7/16		1-5/8	22
WM 816	STOPS	7/16		1-3/8	22
WM 817	STOPS	7/16		1-1/4	22
WM 818	STOPS	7/16		1-1/8	22
WM 820	STOPS	7/16		7/8	22
WM 823	STOPS	3/8		2-1/4	22
WM 824	STOPS	3/8		1-3/4	22
WM 825	STOPS	3/8		1-5/8	22
WM 826	STOPS	3/8		1-3/8	22
WM 827	STOPS	3/8		1-1/4	22
WM 828	STOPS	3/8		1-1/8	22
WM 830	STOPS	3/8		7/8	22
WM 831	STOPS	3/8		3/4	22
WM 843	STOPS	7/16		2-1/4	22
WM 844	STOPS	7/16		1-3/4	22
WM 845	STOPS	7/16		1-5/8	22
WM 846	STOPS	7/16		1-3/8	22
WM 847	STOPS	7/16		1-1/4	22
WM 848	STOPS	7/16		1-1/8	22
WM 850	STOPS	7/16		7/8	22
WM 851	STOPS	7/16		3/4	22
WM 853	STOPS	3/8		2-1/4	22
WM 854	STOPS	3/8		1-3/4	22
WM 855	STOPS	3/8		1-5/8	22
WM 856	STOPS	3/8		1-3/8	22
WM 857	STOPS	3/8		1-1/4	22
WM 858	STOPS	3/8		1-1/8	22
WM 860	STOPS	3/8		7/8	22
WM 861	STOPS	3/8		3/4	22
WM 873	STOPS	7/16		2-1/4	22
WM 874	STOPS	7/16		1-3/4	22

WM	875	STOPS	7/16	1-5/8	22
WM	876	STOPS	7/16	1-3/8	22
WM	877	STOPS	7/16	1-1/4	22
WM	878	STOPS	7/16	1-1/8	22
WM	880	STOPS	7/16	7/8	22
WM	881	STOPS	7/16	3/4	22
WM	883	STOPS	3/8	2-1/4	22
WM	884	STOPS	3/8	1-3/4	22
WM	885	STOPS	3/8	1-5/8	22
WM	886	STOPS	3/8	1-3/8	22
WM	887	STOPS	3/8	1-1/4	22
WM	888	STOPS	3/8	1-1/8	22
WM	890	STOPS	3/8	7/8	22
WM	891	STOPS	3/8	3/4	22
WM	903	STOPS	7/16	2-1/4	22
WM	904	STOPS	7/16	1-3/4	22
WM	905	STOPS	7/16	1-5/8	22
WM	906	STOPS	7/16	1-3/8	22
WM	907	STOPS	7/16	1-1/4	22
WM	908	STOPS	7/16	1-1/8	22
WM	910	STOPS	7/16	7/8	22
WM	911	STOPS	7/16	3/4	22
WM	913	STOPS	3/8	2-1/4	22
WM	914	STOPS	3/8	1-3/4	22
WM	915	STOPS	3/8	1-5/8	22
WM	916	STOPS	3/8	1-3/8	22
WM	917	STOPS	3/8	1-1/4	22
WM	918	STOPS	3/8	1-1/8	22
WM	920	STOPS	3/8	7/8	22
WM	921	STOPS	3/8	3/4	22
WM	933	STOPS	7/16	2-1/4	22
WM	934	STOPS	7/16	1-3/4	22
WM	935	STOPS	7/16	1-5/8	22
WM	936	STOPS	7/16	1-3/8	22
WM	937	STOPS	7/16	1-1/4	22
WM	938	STOPS	7/16	1-1/8	22
WM	940	STOPS	7/16	7/8	22
WM	941	STOPS	7/16	3/4	22
WM	943	STOPS	3/8	2-1/4	22
WM	944	STOPS	3/8	1-3/4	22
WM	945	STOPS	3/8	1-5/8	22

WM	946	STOPS	3/8	1-3/8	22
WM	947	STOPS	3/8	1-1/4	22
WM	948	STOPS	3/8	1-1/8	22
WM	950	STOPS	3/8	7/8	22
WM	951	STOPS	3/8	3/4	22
WM	953	STOPS	7/16		22
WM	954	STOPS	3/8		22
WM	955	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	956	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	957	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	960	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	962	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	963	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	965	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	967	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	968	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	970	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	972	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	973	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	975	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	977	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	978	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	980	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	982	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	983	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	985	PANEL STRIPS / MULLION CASINGS	3/8	2-1/4	23
WM	987	PANEL STRIPS / MULLION CASINGS	3/8	2	23
WM	988	PANEL STRIPS / MULLION CASINGS	3/8	1-3/4	23
WM	989	PANEL STRIPS / MULLION CASINGS	3/16	2	23
WM	990	SHELF CLEAT	11/16	1-1/2	23
WM	995	CHAMFER STRIP	3/4	3/4	23
WM	999	INSIDE CORNER	5/16	1	23
WM	1021	FLAT STOOLS	11/16		24
WM	1022	FLAT STOOLS	11/16		24
WM	1030	NOSING	1-1/16	1-1/4	24
WM	1031	NOSING	1-1/16	1-1/2	24
WM	1032	NOSING	3/4	1-1/2	24
WM	1033	NOSING	3/4	3-1/2	24
WM	1060	NOSING	1-1/16	3-1/2	24
WM	1061	NOSING	1-1/16	3-1/2	24
WM	1045	HEARTH STRIP	8-May	1/1/2002	25

WM	1131	RABBETED STOOLS	1-1/16		3-5/8	25
WM	1133	RABBETED STOOLS	1-1/16		3-1/4	25
WM	1134	RABBETED STOOLS	1-1/16		2-3/4	25
WM	1153	RABBETED STOOLS	11/16		3-1/4	25
WM	1154	RABBETED STOOLS	11/16		2-3/4	25
WM	1155	RABBETED STOOLS	11/16		2-1/2	25
WM	1156	RABBETED STOOLS	11/16		2-1/4	25
WM	1161	RABBETED STOOLS	1-1/16		3-5/8	25
WM	1163	RABBETED STOOLS	1-1/16		3-1/4	25
WM	1164	RABBETED STOOLS	1-1/16		2-3/4	25
WM	1193	RABBETED STOOLS	11/16		3-1/4	25
WM	1194	RABBETED STOOLS	11/16		2-3/4	25
WM	1195	RABBETED STOOLS	11/16		2-1/2	25
WM	1196	RABBETED STOOLS	11/16		2-1/4	25
WM	1300	T-ASTRAGALS	1-1/4	1-3/16	2-1/4	26
WM	1305	T-ASTRAGALS	1-1/4	1-3/16	2	26
WM	1310	T-ASTRAGALS	1-1/4	1-3/16	2-1/4	26
WM	1315	T-ASTRAGALS	1-1/4	1-3/16	2	26
WM	3000	DOOR SILLS	1-3/8		5-1/4	26
WM	3001	DOOR SILLS	1-3/8		7-1/4	26
WM	3002	DOOR SILLS	1-1/16		5-1/4	26
WM	3020	JAMBS	11/16		4-9/16	27
WM	3025	JAMBS	11/16		5-1/4	27
WM	3030	JAMBS	1-1/4		4-9/16	27
WM	3030	JAMBS	1-1/4		1-7/16	27
WM	3030	JAMBS	1-1/4		1-13/16	27
WM	3040	JAMBS	1		2-3/4	27
WM	3040	JAMBS	11/16		2-7/8	27
WM	4001	THRESHOLD	5/8		3-1/2	28
WM	4002	THRESHOLD	3/4		3-1/2	28
WM	4003	THRESHOLD	3/4		5-1/2	28
WM	4010	THRESHOLD	3/4		3-1/2	28
WM	4020	THRESHOLD	3/4		4-1/2	28
WM	4020	THRESHOLD	5/8		4-1/2	28
WM	4030	THRESHOLD	1-1/16		5-1/2	28
WM	46	PANELING	3/4		width specified	29
WM	17	PANELING	7/16		width specified	29
WM	15	PANELING	7/16		width specified	29
WM	37	PANELING	3/8		width specified	29
WM	313	PANELING	3/8		width specified	29

MID  TN
LUMBER
EST. **CO** 1967

<http://www.MidTNLumber.com>
Tel. (615) 740-5100
moulding@middletennlumber.com